
This is the parts list for the RF33 Refrigerator. It covers all models of the refrigerator, so be certain to check the model and serial number before ordering parts.


The compressor changed several times; door panels changed also.

Table of Contents


Cabinet								•		•			 									page 2
Refrigeration													 									page 4
Condenser													 							•		page 6
Wiring Diagra	ms	3											 									page 7

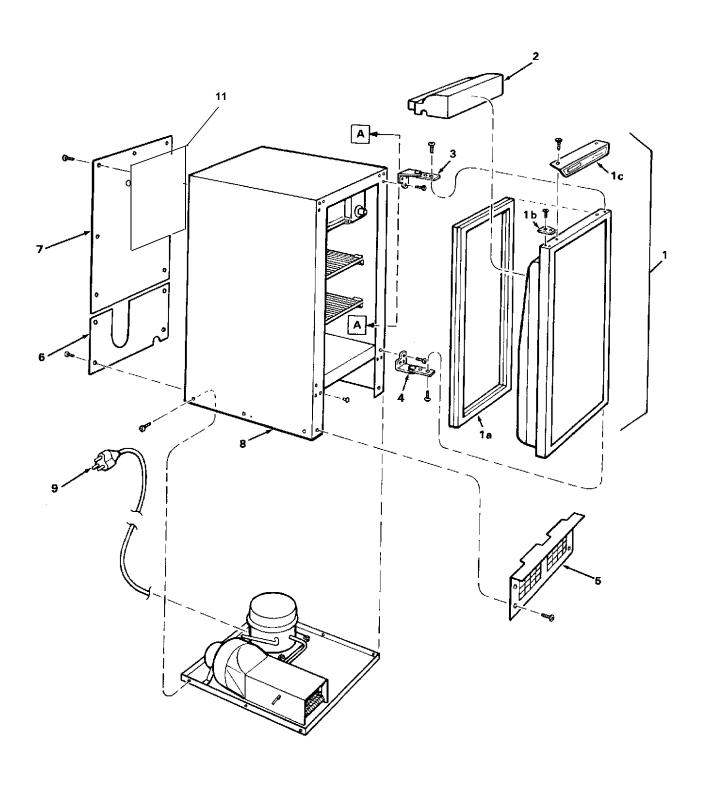

INDEX NO.	PART NUMBER	DESCRIPTION								
1	A35364-007	Door with alum. trim (white panel)								
	A35364-004	Door with alum trim (sandalwood panel)								
1a	13-0825-01	Gasket								
1b	15-0648-02	Left side filler plate								
	15-0648-01	Right side filler plate (shipped w/product as spare)								
	03-1418-24	Screw for alum door								
	03-1418-40	Screw for brass door								
1c	A29044-001	Handle, alum								
	03-1607-02	Screw for brass door								
	03-1607-01	Screw for alum door								
	15-0731-01	Emblem label (white)								
2	obsolete	Tray, not used after 1980								
3	15-0653-01	Hinge								
4	15-0653-02	Hinge								
	03-1418-40	Screw for brass door								
	03-1418-24	Screw for alum door								
5	02-2243-02	Kickplate								
6	A29411-001	Lower back panel								
7	A29412-001	Upper back panel								
	A35546-001	Back panel RF33A-1WA only (top to base)								
8	A29068-021	Cabinet & liner (sandalwood)								
	A29068-022	Cabinet & liner (white)								
9	12-1638-09	Power cord								
10	02-2489-02	Shelf								
11	02-3256-01	Insulation & bag (RF33A-1WA only)								

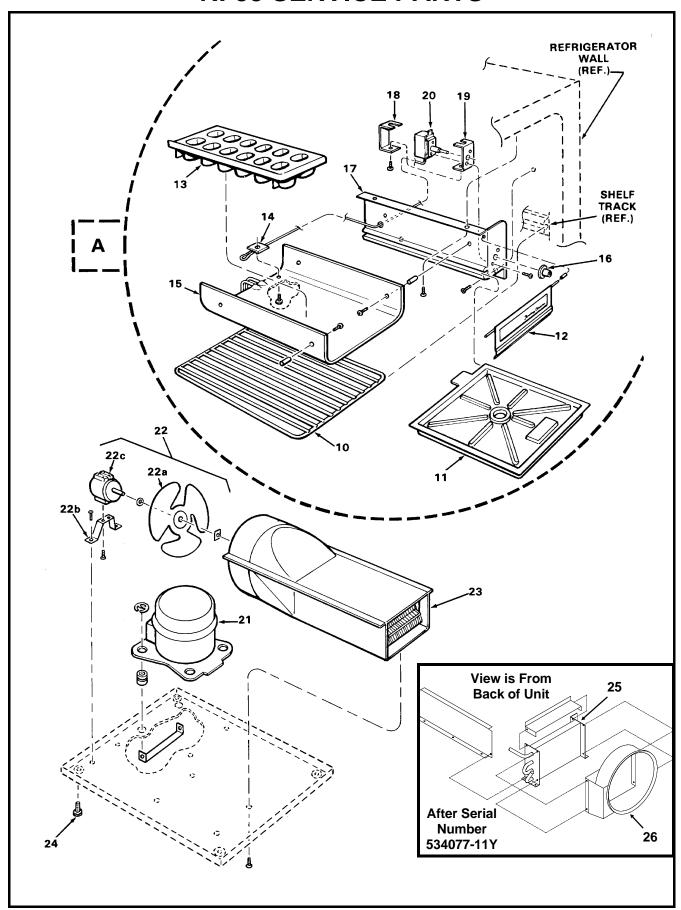


INDEX NO.	PART NUMBER	DESCRIPTION									
10	02-2489-02	Shelf									
11	02-2506-01	Drip pan									
12	02-2507-01	Freezing compartment door									
13	02-2491-01	Optional ice cube tray									
14	no number	bulb holder clip									
15	A29423-001	Evaporator									
	02-2505-01	Spacer									
	03-1611-04	Screw									
	A35548-001	Suction line									
16	15-0657-01	Knob									
17	02-2823-01	Thermostat housing									
	03-1611-01 Screw										
18	A32074-001	Cover, goes with item 19									
	03-1404-33	Screw									
19	A32073-001	Base, goes with item 18									
20	11-0406-01	Thermostat, before serial number 872065-12G									
	11-0442-21	Thermostat, after serial number 872065-12G									
	12-1213-06	Bushing									
	13-0557-00	Grommet									
21	18-4900-42	Overload for Matsushita (up to serial number 801213-01U)									
	18-4900-43	Relay for Matsushita									
	18-6000-21	Compressor (Sanyo) after sn 813051-3U, up to RF33A-1WA; (replaces Matsushita)									
	18-6000-42	Relay for Sanyo (Sanyo has internal overload)									
	18-8714-01	Compressor for RF33A-1WA (Embraco)									
	18-8714-51	Relay for Embraco									
	18-8714-52	Overload for Embraco									
	A29015-002	Bracket, compressor mounting									
	18-8715-01	Grommet for RF33A-1WA (Embraco comp)									
	02-2497-01	Clip									
22	no number	Fan motor & Bracket assembly									
	03-1531-07	Screw									
22a	18-8713-01	Blade, fan									
22b	A28798-001	Bracket, mounting									
22c	12-2454-01	Fan motor									
23	A29067-020	Shroud and condenser assembly, used up to serial number 543077-11Y (April 1992)									
	03-1404-08	Screw									
24	03-1608-01	Leveler, Leg									
25	18-8710-01	Condenser used after serial number 534077-11Y, up to RF33A-1WA.									
	18-8712-01	Condenser for RF33A-1WA only									
26	02-2871-01	Fan shroud used after serial number 534077-11Y									

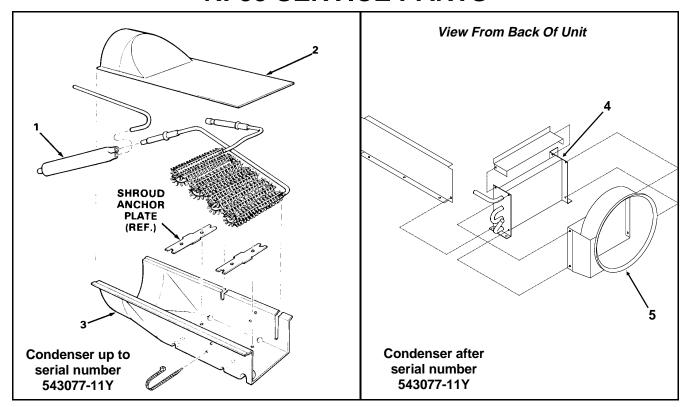


Condenser Fan Shroud Assembly

INDEX NO.	PART NUMBER	DESCRIPTION
	A29067-020	Shroud and condenser assembly, used up to serial number 543077-11Y (April 1992)
1	02-2488-01	Drier
2	02-2860-01	Top of shroud
3	02-2861-01	Bottom of shroud
4	18-8710-01	Condenser used after serial number 543077-11Y, up to RF33A-1WA
	18-8712-01	Condenser for RF33A-1WA only
5	02-2871-01	Fan shroud used after serial number 543077-11Y

Prior Model Wiring Diagrams

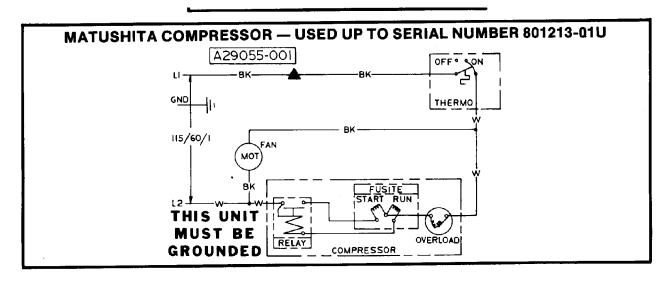

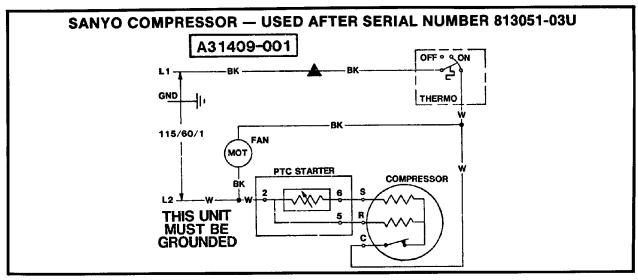

Wiring Diagram for RF33A-1WA

